

DW DW

WHAT'S IN THE BOX Quick Setup Screws and and Download Anchors - 2pcs Mounting Star Wrench Template (T10) Moisture Absorber Hexagonal 1 wrench 2.0 (Recommended) Waterproof Cap and Rubber Rings (Black:

Default Login Information: admin | admin When logging into the camera for the first time, you must setup a new password. You can set the new password using the DW® IP Finder™ software or directly from the camera's browser menu.

Ø0.15" (Ø4mm), White: Ø0.19" _(Ø5mm))
NOTE: Download all your support materials and tools in one place 1. Go to: http://www.digital-watchdog.com/resources 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter. 3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.
Attention: This document is intended to serve as a quick reference for the initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.
SAFETY AND WARNING INFORMATION Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected. WARNING

2.

15.

Guide

- 5. 6 /. 8.
- In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed.

 Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.

 Make sure the power supply voltage is correct before using the camera.

 Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.

 Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.

 Securely plug the power cord into the power source. An insecure connection may cause a fire.

 When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.

 Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock.

 Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.

 Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.

 Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat.

 Keep out of direct sunlight and heat radiation sources. It may cause a fire.

9. 10 11. that produce heat.

Keep out of direct sunlight and heat radiation sources. It may cause a fire.

If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way.

When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock. 14

- electric shock CAUTION Use proper safety gear when installing and wiring the product. Keep away from a location subject to excessive Do not drop obje vibration or magnetic interference.
- Do not use this product near water.

 The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. 5. Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the
- image sensor.

 The Main plug is used as a disconnect device and shall stay readily operable at any time.

 Remove the power adapter from the outlet when then there is lightning. Neglecting to do so may cause fire or damage to the product.

 Do not block any ventilation openings, Install following the manufacturer's instructions. 6. 7. 8.
- damage to the product.

 Do not block any ventilation openings. Install following the manufacturer's instructions.

 A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement.

 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.

 If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser beam as that may demonst the sensor module. 10 11.
- beam as that may damage the sensor module.

 If you want to move the already installed product, be sure to turn off the power and then move or reinstall it.

 Proper configuration of all passwords and other security settings is the responsibility of the installer and/or 12. 13. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.

 Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device 15.
- from dirt. Use only attachments/accessories specified by the manufacturer.

 Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount. 17. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury 19.
- from tip-over 20. Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
- STEP 1 PREPARING TO MOUNT THE CAMERA 1. Install the Dessicant Pack (moisture absorber):

· Remove the Dessicant Pack from its shipping packaging. Fold the moisture absorber pack diagonally along the dotted line, as shown

· Close the camera control panel tightly. When closing the control

- in the diagram below. · Open the camera's control panel on the side of the camera using the star wrench included with the camera. Remove the Dessicant Pack used for shipping and place the new Dessicant Pack in the location shown in the illustration below.
- panel, ensure no cables are caught or disconnected.
- ΛOδ Folding in half **√0**8 OF

normal operation. In cases where the camera experiences a moisture issue, keep the moisture absorber in the camera. WARNING: Install the moisture absorber when mounting the camera to

mounting template sheet or the camera itself.

STEP 2 - POWERING THE CAMERA

Use a PoE Injector (Sold

Power information Power requirements

NOTE:

🔯 4.5Ø

hexagonal wrench.

Panning 360°

lens before operation.

the installation process.

separately) to connect data and power to the camera using a

o

 $_{\circ})$

NOTE: The camera will generate enough heat to dry moisture during

2. Mark and drill the necessary holes in the wall or ceiling using the

prevent performance issues and damage to the camera.

Use a non-PoE Switch to connect

data using an Ethernet cable and

-CD - CD-- **7** - C:

use a power adapter to power

OR single Ethernet cable. the camera.

Pass the wires through and make all necessary connections.

DWC-XSTD05Bi: DC: max 7.5W, 625mA, PoE: max 9.5W, 197mA Power consumption DWC-XSTD05Mi: DC: max 8.5W, 708mA, PoE: max 11W, 229mA Maximum distance 328' (100m) RJ45 Connector WATERPROOF CAP INSTALLATION

DC12V, PoE (Adapter not included)

The waterproof cap set comes with two rubber rings. Use the rubber

Cables with ø4.5mm to ø5.5mm thickness should use the black rubber ring. Cables over ø5.5mm in thickness should use the white rubber ring.

Make sure the o-ring 🗿 is in place between 🥃

and 💿 to prevent moisture damage. In extreme

ring best sized for your network cable's diameter.

environments, use an outdoor-rated electrical tape. NOTE: Unused cables should be sealed with electric tape.

b

C

CAMERA

RECORDER 0

ELECTRICAL TAPE 0

STEP 3 - INSTALLING THE CAMERA

1. Secure the camera to the mounting surface using the included screws.


from getting caught between the camera and the mounting surface.

2. Use the rubber plug on the side of the camera as a cable guide to prevent cables

3. Adjust the camera's view and position by loosening the rotation screws using the

Rotation 360°

Rubber plug

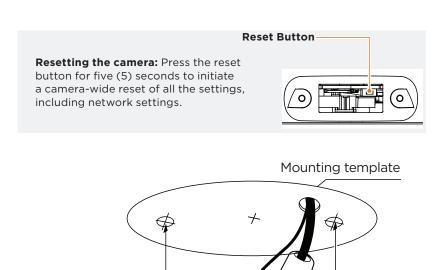

Tilting 87°

NOTE: When setting up the **<u>DWC-XSTD05Mi</u>** camera for the first time, use the CALIBRATE button on the camera's web GUI to calibrate the camera's

4. Remove the protective film from the lens cover. Softly wipe the lens cover with lens tissue or a microfiber cloth with ethanol to remove any dust or smudges left from

Network **Alarm Out**

Power

table to the right for color cables.

star wrench included with the camera.

pressing the SD card until it clicks.

color cables.

remove the card.

1. Power - Connect the camera to a power supply (see STEP 2).

STEP 5 - MANAGING THE SD CARD (OPTIONAL)

2. Insert class 10 SD/SDHC/SDXC card into the SD card slot by

1. Open the camera's control panel on the side of the camera using the

3. Press the card inward until it clicks to release from the card slot, then

NOTE: Maximum SD Card size supported: Up to 1TB micro SD / FAT32. When inserting the SD card into the card slot, the SD card's contacts should be facing upward, as shown in the diagram.

2. Network - Connect the camera to the network via a PoE switch (see STEP 2). Audio out - Connect external audio devices such as a speaker to the camera. 4. Alarm out - Connect alarm devices such as lights, sirens or door locks. See the

5. Alarm In - Connect sensor or alarm input devices. See the table to the right for

DI (+)

DI (-)

DO (-)

DO (+)

WHITE

YELLOW

SKY BLUE GRAY + DOT

Alarm In

Audio Out

STEP 4 - CABLING

Protective film

- the user ID. d. Click "change" to apply all changes.
- The GUI display may differ by camera models.

2. Double-click on the camera's view in the results table.

Change admin's password Retype Password Password Hint

listed at patentlist.accessadvance.com.

Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

Tel: +1 (866) 446-3595 / (813) 888-9555

Rev: 02/25

- - NOTE: Please see the full product manual for web viewer
- SD Card Slot 0 STEP 6 - DW® IP FINDER™ Download and install the DW IP Finder from the DW website at: http://www.digital-watchdog.com Open the DW IP Finder and click 'Scan Devices' to find the camera on the network. 3. A password must be set when connecting to the mera for t he first tir inder a. Check the box next to the camera. b. Click "Bulk Password Assign" on the left. c. Enter admin/admin for the current username and password. Enter a new username and password to the right. Password must have at least eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain
- STEP 7 WEB VIEWER We DIGITA
 - 4. Enter the camera's username and password you setup in the DW IP If you did not setup a new username and password, a message will direct you to setup a new password for the camera to view the video.

Find the camera using the DW IP Finder.

http://192.168.10.159/ - IP Camera - Internet Explorer

3. Press the 'View Camera Website'.

Password requirement: minimum 8 characters with at least three combinations of uppercase letters, lowercase letters, numbers and special characters. Acceptable special characters are; \sim `1\$ ^ () _ - |{}[]; .?/

[Type the Password]

setup, functions and camera settings options. NOTE: This products is covered by one or more claims of the HEVC Patents

digital-watchdog.com